

## CHAPTER 5 – BUILDINGS AND BUILDING REGULATIONS

### Sec. 5-102. Purpose.

The purpose of this division is:

- (1) To protect the public water supply system from contamination or pollution by isolating within the customer's water system at each piece of equipment or hazard where contaminants or pollutants which could backflow through the service connection into the public water supply system.
- (2) To promote the elimination or control of existing cross-connections, actual or potential, between the public or consumer's potable water system and nonpotable water systems, plumbing fixtures and sources or systems containing substances of unknown or questionable quality.
- (3) To provide for the maintenance of a continuing program of cross-connection control which will prevent the contamination or pollution of the public and consumer's potable water systems.

(Code 1977, § 8-2-4(A))

(Ord. No. 2011-22, 11/1/2011, Amended) SUPP 2011-4